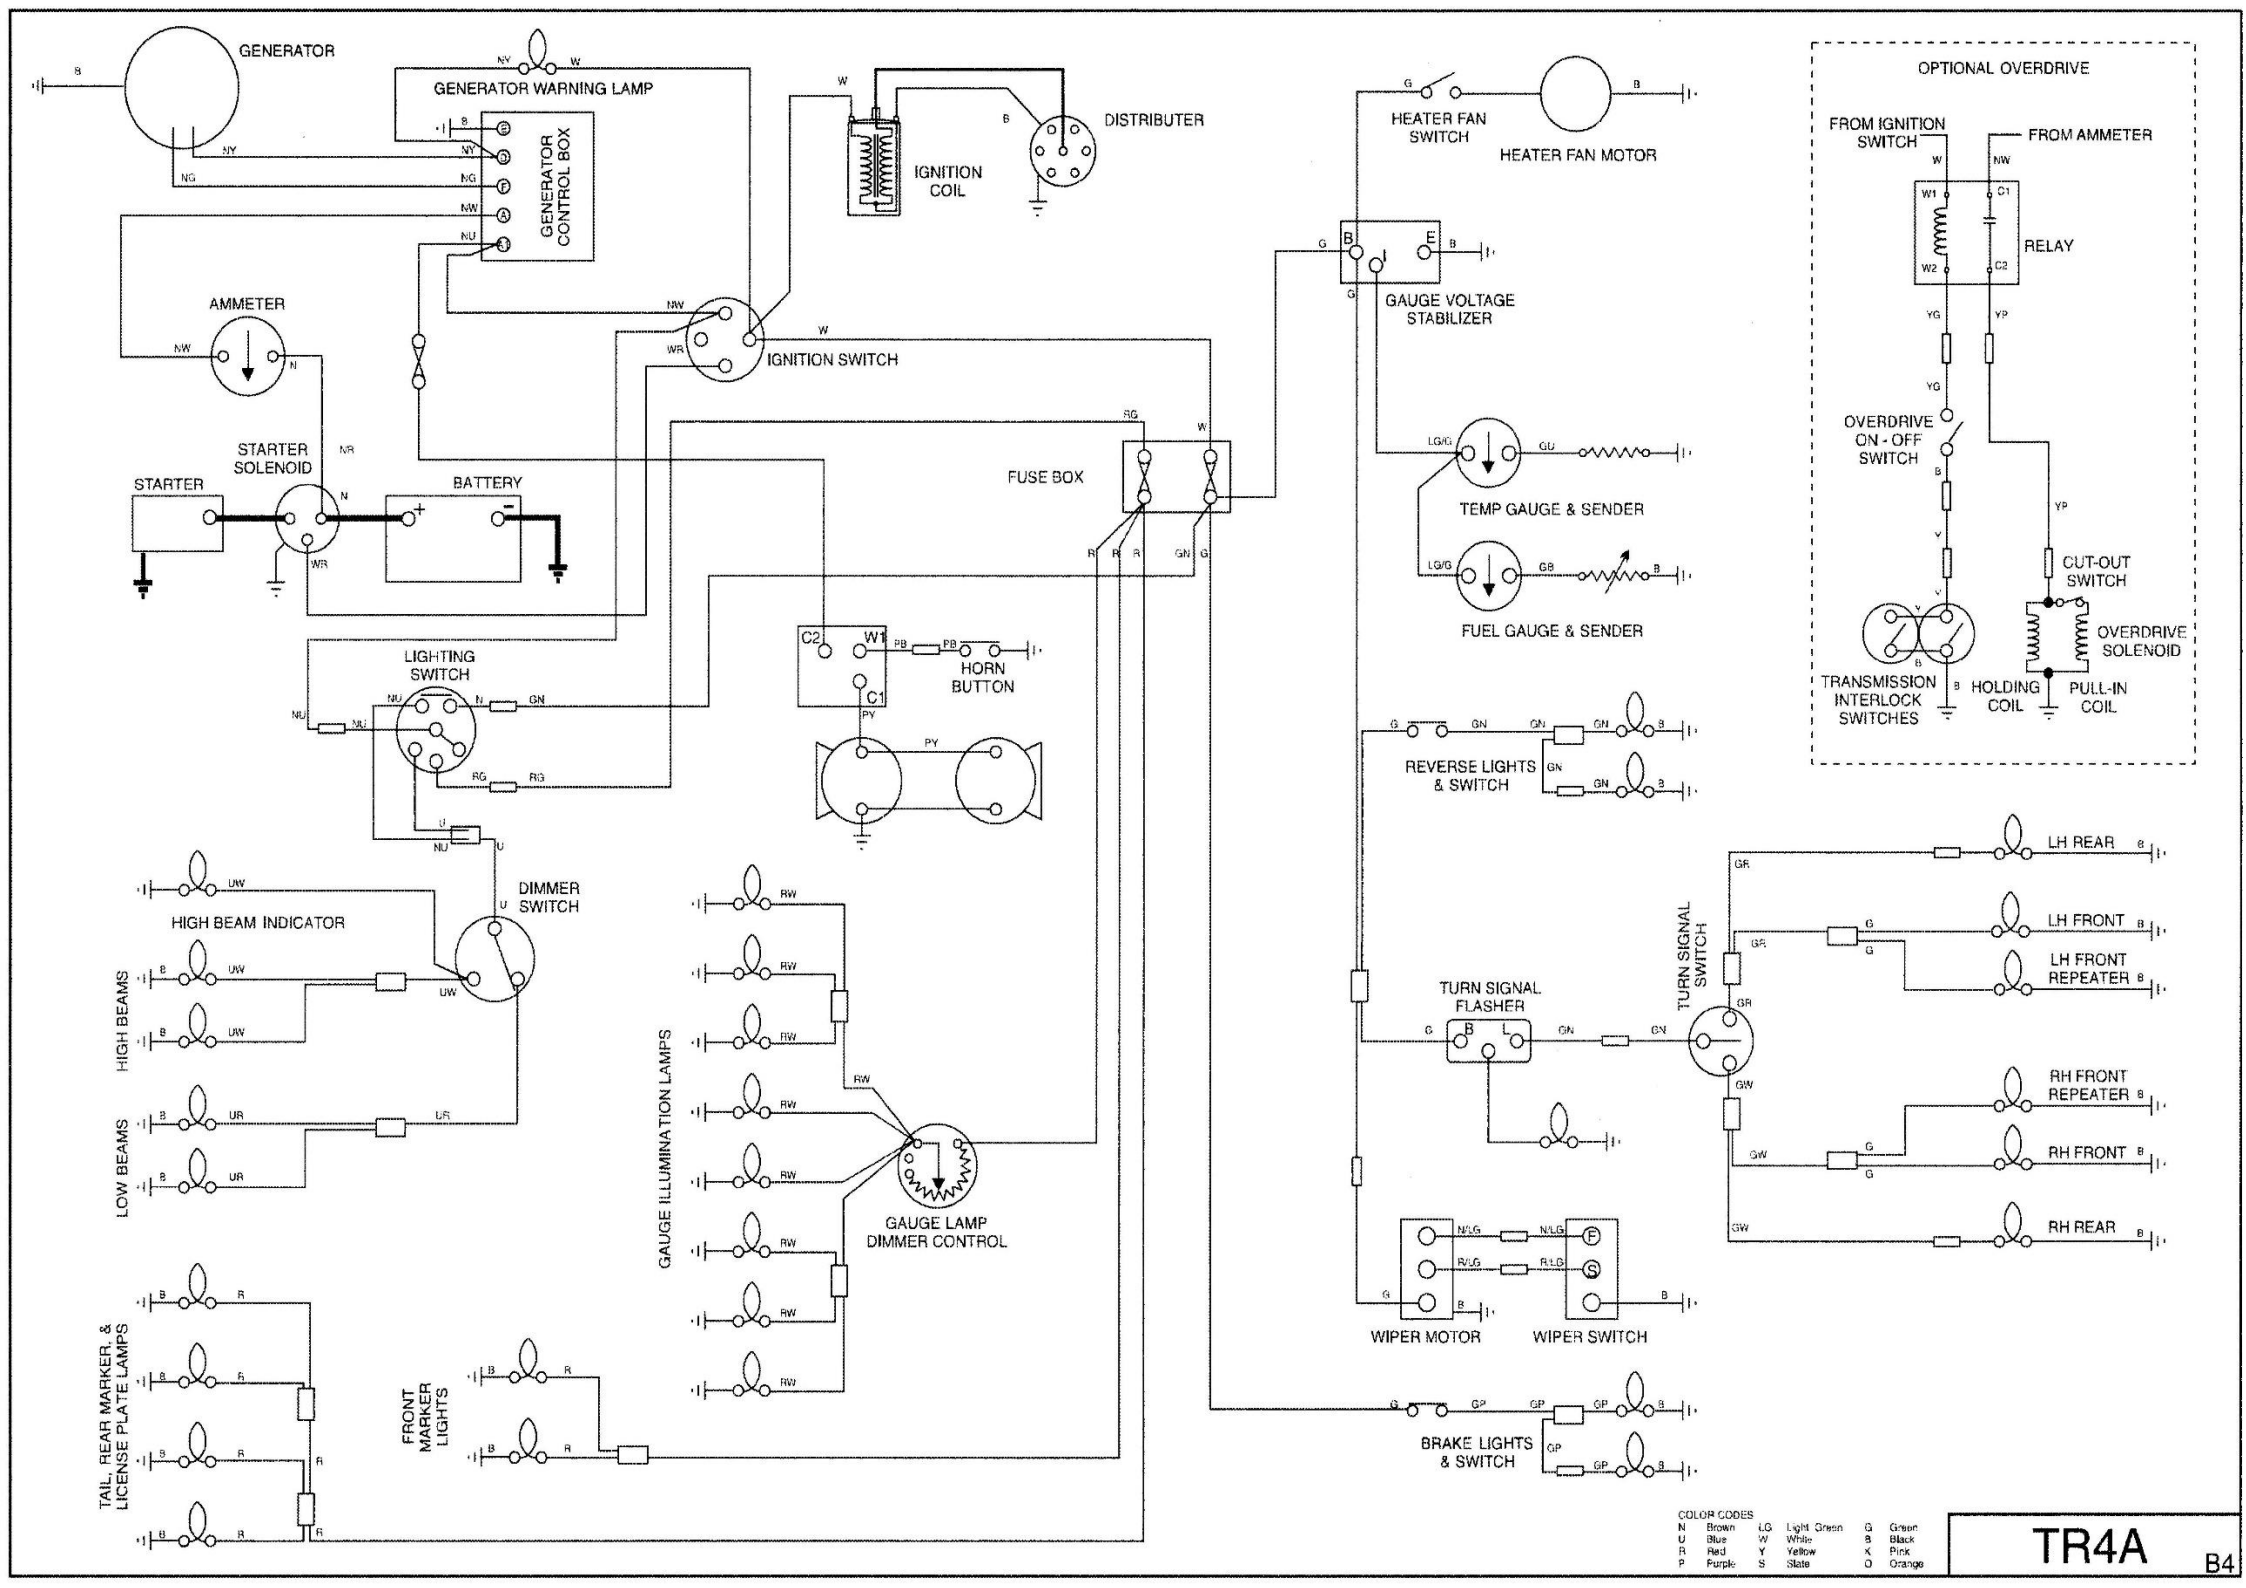
GENERATOR
GENERATOR WARNING LAMP
GENERATOR CONTROL BOX
IGNITION COIL
DISTRIBUTER
AMMETER
IGNITION SWITCH
STARTER SOLENOID
STARTER
BATTERY
FUSE BOX
HEATER FAN SWITCH
HEATER FAN MOTOR
GAUGE VOLTAGE STABILIZER
TEMP GAUGE & SENDER
FUEL GAUGE & SENDER
OPTIONAL OVERDRIVE
FROM IGNITION SWITCH
FROM AMMETER
RELAY
OVERDRIVE ON - OFF SWITCH
CUT-OUT SWITCH
OVERDRIVE SOLENOID
TRANSMISSION INTERLOCK SWITCHES
HOLDING COIL
PULL-IN COIL
LIGHTING SWITCH
HORN BUTTON
REVERSE LIGHTS & SWITCH
DIMMER SWITCH
HIGH BEAM INDICATOR
HIGH BEAMS
LOW BEAMS
GAUGE ILLUMINATION LAMPS
GAUGE LAMP DIMMER CONTROL
TURN SIGNAL FLASHER
TURN SIGNAL SWITCH
LH REAR
LH FRONT
LH FRONT REPEATER
RH FRONT REPEATER
RH FRONT
RH REAR
WIPER MOTOR
WIPER SWITCH
TAIL, REAR MARKER, & LICENSE PLATE LAMPS
FRONT MARKER LIGHTS
BRAKE LIGHTS & SWITCH
COLOR CODES
N Brown LG Light Green G Green
U Blue W White B Black
R Red Y Yellow K Pink
P Purple S Slate O Orange
TR4A
B4